


*Designers & Manufacturers of Drilling & Tapping Solutions*

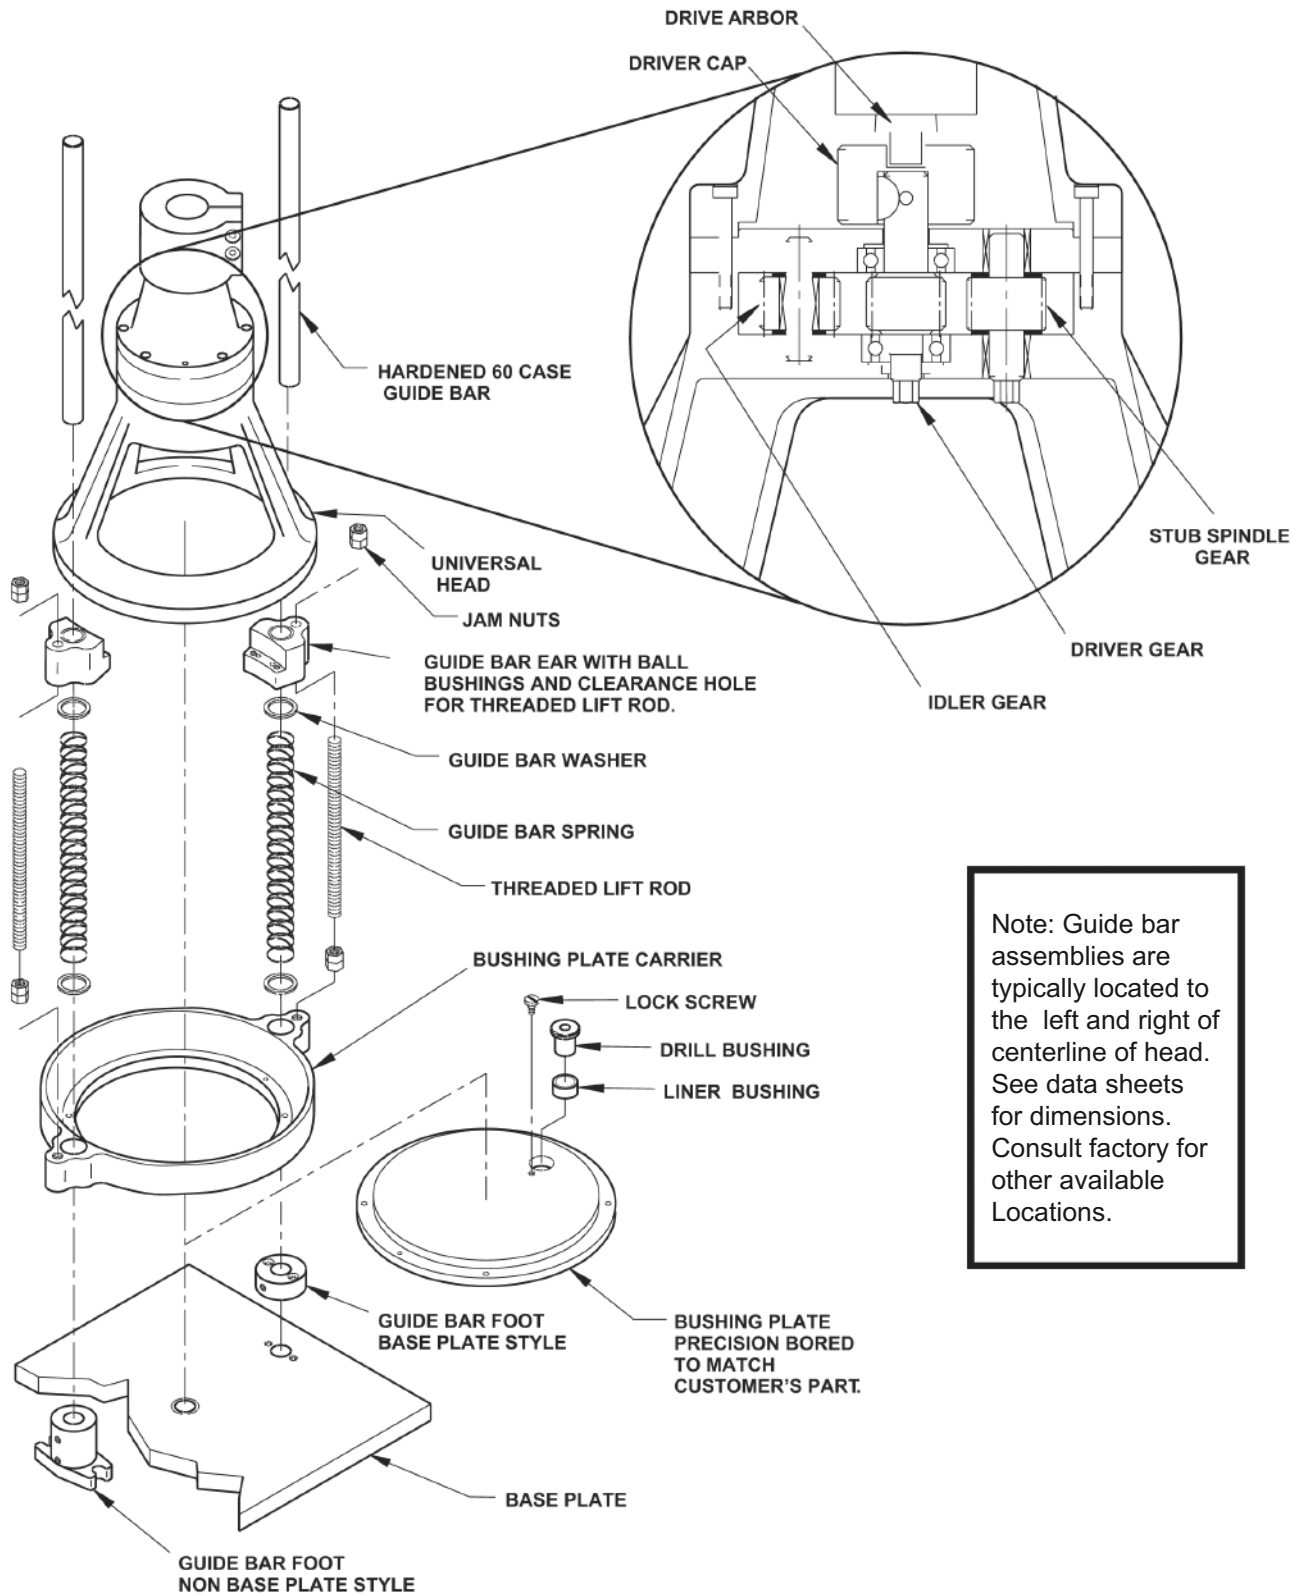

Note: Guide bar assemblies are typically located to the left and right of centerline of head. See data sheets for dimensions. Consult factory for other available Locations.